

NAC&ZAC

New Pet Net Barrier Care and Installation Guide


The New Pet Net Barrier can be attached to either the front seat headrests or the handles above the seat. You can choose the method that best fit your car, and make the highest blockage. If you use the headrests, raise the headrests first to make a higher blocked space.

The package contains one net barrier, 3 metal poles which can be connected together to hold the barrier against pet pushing, and 6 hooks to attach the barrier.


Installation Instruction:




Step 1: There are 3 Aluminum poles in the package connect the metal poles together.

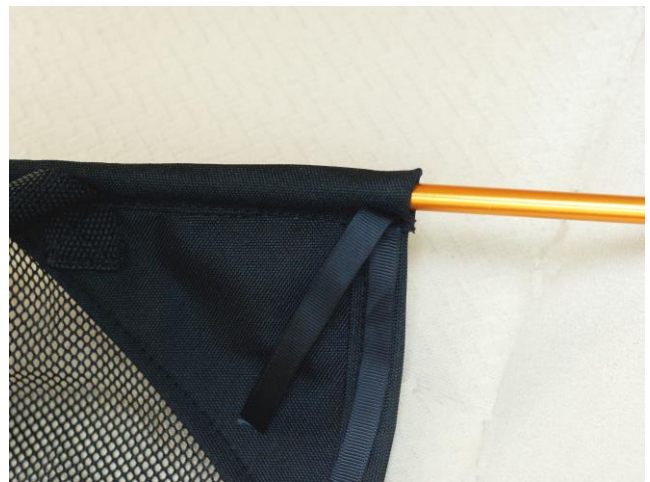

Step 2: Insert the connected poles into the sleeve on the top of the barrier.

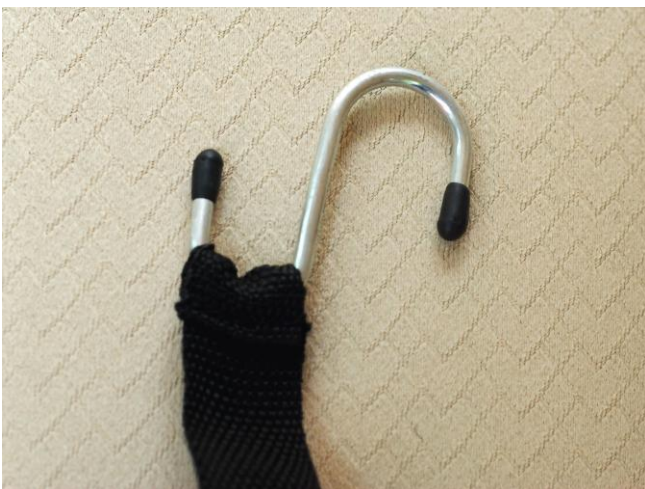

Step 3: Insert the hooks into the loop at the end of the strips.

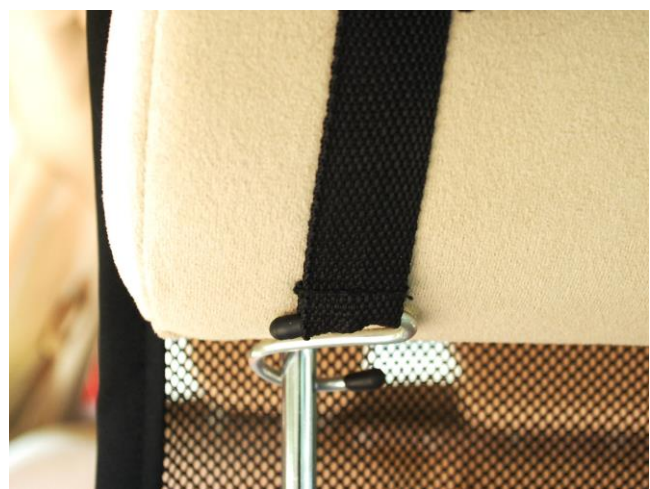

Step 4: There are several upper attachment options for the barrier. One option is to attach the hooks to the headrest rods of the front seats.



You can also attach the hooks to the handles above the seats, or the seatbelt fixtures. Choose the method that best fits your car and makes the highest blockage.



Step 5: After the hooks are attached, pull the other end of the strip, this can easily fasten the strip and hold the barrier.



Step 5: Attach the bottom corner hoots to the seatbelt fixture or find attachment under the seats, then fasten the strips by pulling the other end of the strips.



Step 7: Attach the bottom central hoots to the underside of the front seats, and fasten the strips.

Care Instructions:

- Machine wash cold.
- Wash separately, dark color.
- Do not bleach.
- Line dry.
- Do not tumble dry.
- Do not Iron.
- Do not dry clean.
- Remove promptly.

Cautions:

Contains small elements in package, keep out of reach of children.